



MODULE INSTALLATION AND USER MANUAL – P MULTI

REVISION DATE: 6/14/2017

DOCUMENT # GE-SA1-0007

MODULE INSTALLATION AND USER MANUAL – P MULTI

MISSION SOLAR ENERGY - MSE CONTROLLED - PROPRIETARY & CONFIDENTIAL - RELEASED

Reproduction, dissemination, copying, modification, distribution and/or publication of this material is **STRICTLY PROHIBITED**. Disclosure of this document, in any manner to a third party, requires prior written consent from **MISSION SOLAR ENERGY LLC**.

REVISION: R1

RELEASE DATE: 5/2/2017



MODULE INSTALLATION AND USER MANUAL – P MULTI

REVISION DATE: 6/14/2017

DOCUMENT # GE-SA1-0007
PAGE: 1 OF 12

TABLE OF CONTENTS

- 1.0 DISCLAIMER 2**
- 2.0 HANDLING AND USE 2**
- 3.0 LIMITATION OF LIABILITY AND LIMITED REMEDIES 2**
- 4.0 GENERAL INSTRUCTIONS..... 2**
- 5.0 SAFETY 3**
 - 5.1. GENERAL WARNING: 3
 - 5.2. MECHANICAL: 4
 - 5.3. ELECTRICAL SHOCK HAZARD: 4
 - 5.4. FIRE:..... 4
- 6.0 OPERATING CONDITIONS 5**
 - 6.1. TEMPERATURE:..... 5
 - 6.2. INSTALLATION CONDITIONS:..... 5
- 7.0 UNPACKING AND STORAGE 5**
 - 7.1. UNPACKING: 5
 - 7.2. GENERAL INSTRUCTIONS 6
- 8.0 PRODUCT ELECTRICAL SPECIFICATIONS..... 6**
- 9.0 MECHANICAL INSTALLATION..... 6**
 - 9.1. MOUNTING CLAMPS 8
- 10.0 GROUNDING INSTRUCTIONS..... 9**
 - 10.1. WEEB-UIR 9
- 11.0 ELECTRICAL INSTALLATION..... 10**
 - 11.1. LOCAL/NATIONAL CODE AND LOCAL REGULATIONS 10
 - 11.2. WIRING..... 10
 - 11.3. CONNECTORS 11
 - 11.4. DIODES 11
- 12.0 MAINTENANCE..... 11**
 - 12.1. VISUAL INSPECTION: 11
 - 12.2. CLEANING:..... 12
 - 12.3. ADDITIONAL DOCUMENTS..... 12
 - 12.4. DISPOSAL..... 12
- R. REVISION HISTORY 12**

MISSION SOLAR ENERGY - MSE CONTROLLED- PROPRIETARY & CONFIDENTIAL - RELEASED

Reproduction, dissemination, copying, modification, distribution and/or publication of this material is **STRICTLY PROHIBITED**. Disclosure of this document, in any manner to a third party, requires prior written consent from **MISSION SOLAR ENERGY LLC**.

REVISION: R1

RELEASE DATE: 5/2/2017



MODULE INSTALLATION AND USER MANUAL – P MULTI

REVISION DATE: 6/14/2017

DOCUMENT # GE-SA1-0007

PAGE: 2 OF 12

1.0 DISCLAIMER

This manual is provided to you on an “as is” basis without warranty, covenant or representative of any kind, express or implied, including the warranties of merchantability or fitness for a particular purpose. Mission Solar Energy uses its best efforts to ensure the accuracy of the contents of this manual; however, Mission Solar Energy is not responsible for the accuracy of said contents or results if your use of same. Under no circumstances will Mission Solar Energy be liable to you or any third party for damages arising under any legal theory including contract, tort, negligence or strict liability or for direct, indirect, special, consequential; or punitive damages of any kind, including lost profits. Mission Solar Energy reserves the right to make changes without further notice to this manual and to any modules. Mission Solar Energy does not convey any license under its intellectual property rights. Mission Solar Energy assumes no responsibility for any infringement to patents or other rights of third parties that may result from use of this manual or related module.

2.0 HANDLING AND USE

Mission Solar Energy shall not be liable for, and buyer shall indemnify, defend and hold harmless Mission Solar Energy, its affiliates and their respective officers, directors, employees, representatives and agents (“indemnities”) from and against, any and all claims, losses, liabilities, costs and expenses (including attorney’s fees) (“claims”) arising out of or resulting from the handling, use, processing, alteration, distributions, sale or marketing of modules and this manual, or any other action or inaction with regard to the modules and this manual, in each case after the delivery thereof to buyer; provided however, that buyer shall not be liable to Mission Solar Energy for damages directly caused by the sole negligence of Mission Solar Energy. Buyer’s obligations under this section shall survive the termination, cancellations or expiration of all orders delivered under these terms and the cessation of any business transaction between Mission Solar Energy and buyer.

3.0 LIMITATION OF LIABILITY AND LIMITED REMEDIES

In no event will Mission Solar Energy be liable to buyer for any lost or prospective profits, indirect, incidental, consequential, special, exemplary or punitive damages, including, without limitation, lost earnings, or business interruption, whether or not based upon Mission Solar Energy’s negligence, breach of warranty, strict liability, in tort or any other cause if action. Buyer’s exclusive remedy VIS-À-VIS Mission Solar Energy or any other cause if action related to the modules and this manual, is, at Mission Solar Energy’s option limited to (i) replacement of the non-conforming modules; or (ii) refund to buyer of the portion of the purchase of the purchase price attributable to such non-conforming modules. In no event shall Mission Solar Energy’s cumulative liability exceed the price of modules sold which was the direct cause of the alleged loss, damage or injury.

4.0 GENERAL INSTRUCTIONS

This manual provides important safety instructions regarding to installation, maintenance and handling of Mission Solar Energy photovoltaic modules. All the users should read this manual carefully and follow the instructions strictly. The installation of solar modules requires specialized skills and experience and should only be performed by licensed professionals.

MISSION SOLAR ENERGY - MSE CONTROLLED - PROPRIETARY & CONFIDENTIAL - RELEASED

Reproduction, dissemination, copying, modification, distribution and/or publication of this material is **STRICTLY PROHIBITED**. Disclosure of this document, in any manner to a third party, requires prior written consent from **MISSION SOLAR ENERGY LLC**.

REVISION: R1

RELEASE DATE: 5/2/2017

MODULE INSTALLATION AND USER MANUAL – P MULTI

REVISION DATE: 6/14/2017

DOCUMENT # GE-SA1-0007

PAGE: 3 OF 12

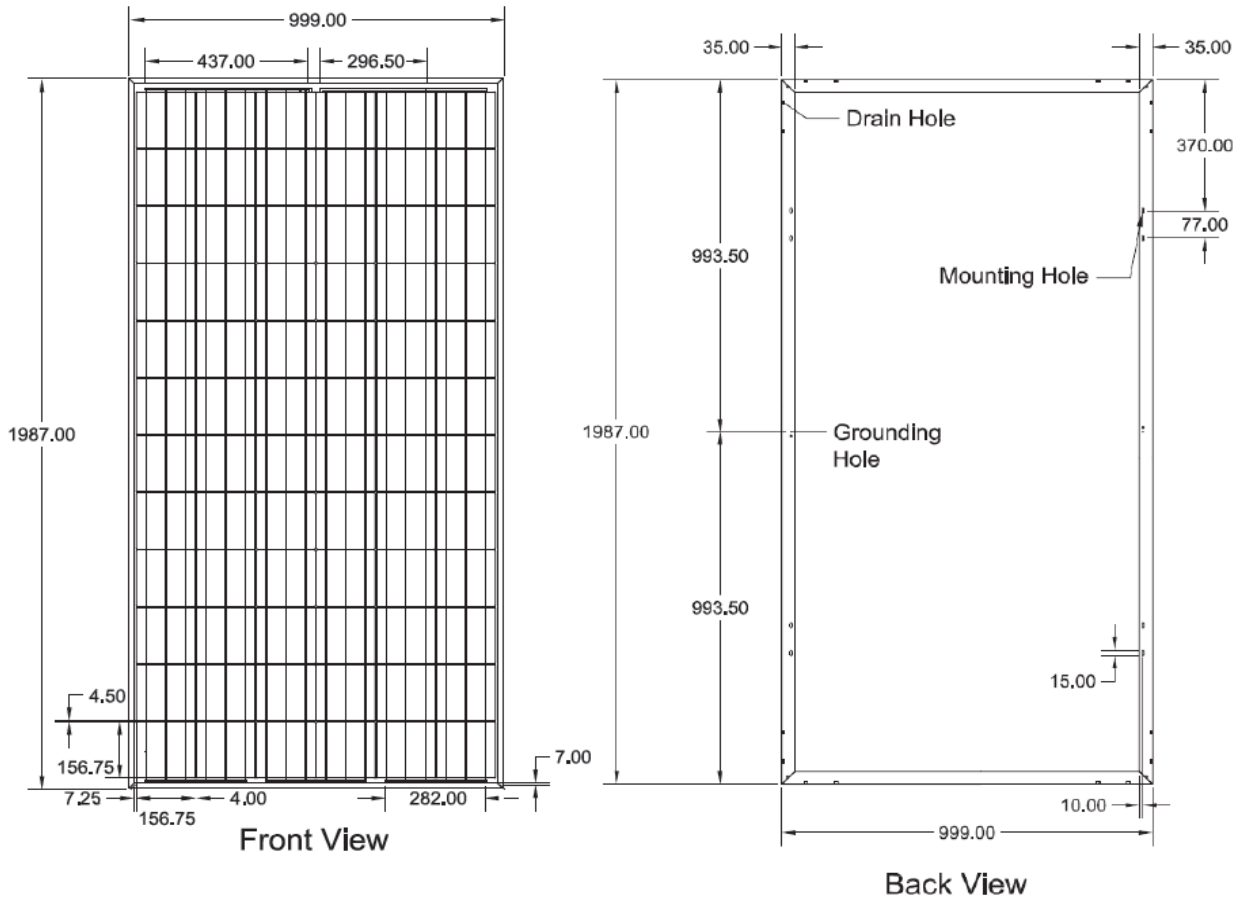


FIGURE 1: OVERVIEW OF MSE MULTI 72

5.0 SAFETY

5.1. GENERAL WARNING:



- You must understand and follow all applicable local, state, and federal regulations and standards for building construction, electrical design, fire, and safety, and must check with local authorities to determine applicable permitting requirements before attempting to install or maintain PV modules.
- Module interconnects pass direct current (DC) when exposed to sunlight or other light sources.
- Contact with electrically active parts of the module, such as terminals, can result in injury or death, whether the module is connected or disconnected.
- Never wear metallic rings, watch bands, ear, nose or lip rings or other metallic devices when installing or trouble shooting a photovoltaic system

MISSION SOLAR ENERGY - MSE CONTROLLED- PROPRIETARY & CONFIDENTIAL - RELEASED

Reproduction, dissemination, copying, modification, distribution and/or publication of this material is **STRICTLY PROHIBITED**. Disclosure of this document, in any manner to a third party, requires prior written consent from **MISSION SOLAR ENERGY LLC**.

MODULE INSTALLATION AND USER MANUAL – P MULTI

REVISION DATE: 6/14/2017

DOCUMENT # GE-SA1-0007

PAGE: 4 OF 12

5.2. MECHANICAL:

- Rooftop PV systems should only be installed on dwellings that have been formally analyzed for structural integrity, and confirmed to be capable of handling the additional weighted load of PV system components, including PV modules, by a certified building specialist or engineer. For your safety, do not attempt to work on a rooftop until safety precautions have been identified and taken, including without limitation fall protection measures, ladders or stairways, and personal protective equipment (PPE).
- For your safety, do not install or handle PV modules under adverse conditions, including without limitation strong or gusty winds, and wet or frosted roof surfaces.
- The flat-plate PV module construction consists of a laminated assembly of solar cells encapsulated within an insulating material with a rigid glass surface and an insulated substrate. The laminated assembly is supported by an aluminum frame that is also used for mounting the module.



5.3. ELECTRICAL SHOCK HAZARD:

- PV modules can produce current and voltage when exposed to light of any intensity. Electrical current increases with higher light intensity.
- DC voltage of 30 Volts or higher is potentially lethal. Contacting the live circuitry of a PV system operating under light can result in lethal electric shock.
- Use insulated tools and do not wear metallic jewelry while working with PV modules.
- In order to avoid arcing and electrical shock, do not disconnect electrical connections under load.
- Faulty connections can also result in arcing and electrical shock.
- Keep connectors dry and clean, and ensure that they are in proper working condition.
- Never insert metallic objects into the connectors, or modify them in any way in order to secure an electrical connection.
- Do not touch or handle PV modules with broken glass, separated frames or a damaged back sheet unless the PV modules are first disconnected and you are wearing proper PPE.
- Avoid handling PV modules when they are wet unless cleaning the PV modules as directed in this manual.
- Never touch electrical connections that are wet without protecting yourself with insulated gloves.
- Artificially concentrated light shall not be directed on the module or panel.



5.4. FIRE:

- Mission Solar Energy Modules have a Type 1, Class C fire resistance rating in accordance with the IEC 61730 and UL 1703 standard.
- The fire rating of this module is valid only when mounted in the manner specified in the mechanical mounting instructions.
- PV modules are electrical generating devices that may affect the fire safety of a building.
- The use of improper installation methods and/or defective parts may result in the unexpected occurrence of an electrical arc during operation.
- The recommended standoff height is not less than 150mm (6 inches). If other mounting means



MISSION SOLAR ENERGY - MSE CONTROLLED- PROPRIETARY & CONFIDENTIAL - RELEASED

Reproduction, dissemination, copying, modification, distribution and/or publication of this material is **STRICTLY PROHIBITED**. Disclosure of this document, in any manner to a third party, requires prior written consent from **MISSION SOLAR ENERGY LLC**.

REVISION: R1

RELEASE DATE: 5/2/2017



MODULE INSTALLATION AND USER MANUAL – P MULTI

REVISION DATE: 6/14/2017

DOCUMENT # GE-SA1-0007

PAGE: 5 OF 12

are employed this may affect the fire class ratings. A minimum slope of 5in/ft. for installation over a roof is required to maintain the class C fire rating. Modules must be mounted over a fire resistant roof covering rates for the application.

- In order to mitigate the risk of fire in this event, PV modules should not be installed near flammable liquids, gases, or locations with hazardous materials.
- In the event of a fire, PV modules may continue to produce a dangerous voltage, even if they have been disconnected from the inverter, have been partly or entirely destroyed, or the system wiring has been compromised or destroyed.
- In the event of fire, inform the fire crew about the particular hazards from the PV system, and stay away from all elements of the PV system during and after a fire until the necessary steps have been taken to make the PV system safety.

6.0 OPERATING CONDITIONS

6.1. TEMPERATURE:

All the modules must be mounted in environments that ensure they operate within the following maximum and minimum operating temperatures.

- Maximum Operating Temperatures: +90°C (194° F)
- Minimum Operating Temperatures: -40°C (-40° F)

6.2. INSTALLATION CONDITIONS:

Orient the module correctly. Mount the modules with the junction box in the uppermost position and hang the wires downwards to avoid the ingress of water. For optimal module performance install PV modules facing true south in northern latitudes and true north in southern latitudes. Shading will reduce electrical production. This installation is applicable when the module is in portrait orientation. The modules have been evaluated by UL for mounting using the four or eight provided mounting holes in the frame.

7.0 UNPACKING AND STORAGE

7.1. UNPACKING:

- Use two people when unpacking Mission Solar Energy modules.
- Cut the outer straps.
- Remove the top lid.
- Cut the side of the sleeve to remove it. Always avoid scratching the modules when using cutting tools.
- Cut the inner straps.
- Remove the modules one at a time. If necessary, use a stand to prevent the modules from falling while unpacking.
- Lay the remaining modules down on the pallet with the glass side facing upward.

MISSION SOLAR ENERGY - MSE CONTROLLED- PROPRIETARY & CONFIDENTIAL - RELEASED

Reproduction, dissemination, copying, modification, distribution and/or publication of this material is **STRICTLY PROHIBITED**. Disclosure of this document, in any manner to a third party, requires prior written consent from **MISSION SOLAR ENERGY LLC**.

REVISION: R1

RELEASE DATE: 5/2/2017



MODULE INSTALLATION AND USER MANUAL – P MULTI

REVISION DATE: 6/14/2017

DOCUMENT # GE-SA1-0007

PAGE: 6 OF 12

7.2. GENERAL INSTRUCTIONS

- Store modules in a dry so that modules do not get in contact with moisture.
- Do not allow children and unauthorized persons near the installation site or storage area of modules.
- Do not transport modules in an upright position.
- Do not use forklift less 72 inches while handling the module pallet.
- Unpacking module pallet with care and follow the unpacking steps marked on the pallet. Be careful when unpacking, transporting and storing the modules.
- Do not carry a module by its wires or junction box. Recommended at least two or more people carry the module for safety concerns.
- Do not place modules on top of each other directly to prevent the modules touching one another.
- Do not place excessive loads on the module or twist the module frame.
- Do not stand, step, walk and/or jump on the module.
- Do not carry the module above the head.
- Do not drop or place objects on the modules (such as tools.)
- Do not mark the modules with sharp instrument.
- Particular attention should be taken to avoid module back sheet to come in contact with sharp objects, as scratches may directly affect product safety.
- Do not leave a module unsupported or unsecured.
- Do not change the wiring of bypass diodes.
- Keep all electrical contacts clean and dry.

8.0 PRODUCT ELECTRICAL SPECIFICATIONS

PV Modules have been certified for a maximum static load on the back of the module of up to 2400 Pa (i.e. wind load) and a maximum static load on the front of the module of up to either 2400 Pa or 5400 Pa (i.e. wind and snow load). The performance of solar modules is defined on the uniform standard test conditions. These conditions define performance at an incident sunlight of 1000 W/m², a cell temperature of 25°C (77°F) and an AM of 1.5 (AM = Air Mass). The air mass determines the radiation impact and the spectral combination of the light arriving on the earth’s surface. Modules have been evaluated by UL for a maximum positive test load of 113 lbs/ft² and negative test loading of 50 lbs/ft². Rated electrical characteristics (excluding the rated maximum power) are within 10 percent of measured values at Standard Test Conditions of: 1000 W/m², 25°C cell temperature and solar spectral irradiance per ASTM E 892”. Only rated maximum power is within -0/3%.

Table 1: Electrical Ratings of MSE Multi Module Series

Model – P Multi Crystalline	Open Circuit Voltage at STC, (V dc)	Rated Voltage at STC, (V dc)	Maximum System Voltage, (V dc)	Rated Current at STC, (A dc)	Short-Circuit Current at STC, (A dc)	Rated Maximum Power at STC, (Watts)
MSE320MM6J	45.18	36.88	1000	8.69	9.24	320
MSE325MM6J	45.80	37.34	1000	8.72	9.26	325
MSE330MM6J	46.01	37.50	1000	8.81	9.33	330

9.0 MECHANICAL INSTALLATION

MISSION SOLAR ENERGY - MSE CONTROLLED- PROPRIETARY & CONFIDENTIAL - RELEASED

Reproduction, dissemination, copying, modification, distribution and/or publication of this material is **STRICTLY PROHIBITED**. Disclosure of this document, in any manner to a third party, requires prior written consent from **MISSION SOLAR ENERGY LLC**.

REVISION: R1

RELEASE DATE: 5/2/2017



MODULE INSTALLATION AND USER MANUAL – P MULTI

REVISION DATE: 6/14/2017

DOCUMENT # GE-SA1-0007
PAGE: 7 OF 12

The module is considered to be in compliance with IEC 61730 and UL 1703 only when the module is mounted in the manner specified by the mounting instructions below. We recommend using the following orientation to install the module. Maximum number of modules connected in series /parallel for MSE 350 PERC is 24/1 and maximum number of modules connected in series /parallel for MSE 295 PERC 60 is 19/1.

FIGURE 3: LANDSCAPE ORIENTATION

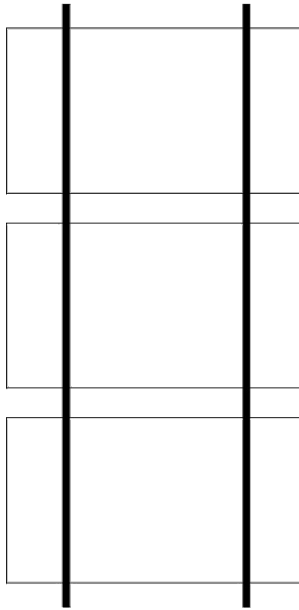


FIGURE 4: PORTRAIT ORIENTATION



MISSION SOLAR ENERGY - MSE CONTROLLED- PROPRIETARY & CONFIDENTIAL - RELEASED

Reproduction, dissemination, copying, modification, distribution and/or publication of this material is **STRICTLY PROHIBITED**. Disclosure of this document, in any manner to a third party, requires prior written consent from **MISSION SOLAR ENERGY LLC**.

REVISION: R1

RELEASE DATE: 5/2/2017

MODULE INSTALLATION AND USER MANUAL – P MULTI

REVISION DATE: 6/14/2017

DOCUMENT # GE-SA1-0007

PAGE: 8 OF 12

9.1. MOUNTING CLAMPS


Use the mounting holes - 297 mm (MSE 290 PERC 60) or 370 mm (for MSE 350 PERC) for mounting through clamps. Make sure that the module is centered between the two purlins and sits perpendicular on the purlins. If the module is not perpendicular, slightly adjust the end-clamp positions to get the proper alignment.

FIGURE 5: MOUNTING CLAMPS



Once the module is aligned and centered, fully tighten the end-clamps in place to 16 ± 2 Nm. All the end clamps should be torqued to this value. Ensure that the channel nuts do not extend outside of the purlin. Drop the mid-clamp into the purlin. Place the channel nut inside purlin and place the grounding clip between the module and purlin with the grounding clip tabs in the middle of the purlin. Install the final two end-clamps once the final module has been placed. Similar to the End-Clamp section, place an end-clamp on each purlin, flush to the final module, with the lip of the end-clamps on top of the module. Fully tighten the end-clamps once they are properly placed. If the channel nuts extend outside of the purlin, spacing has been done improperly and needs to be fixed.

Note: Allowable clamp minimum dimensions are as follows

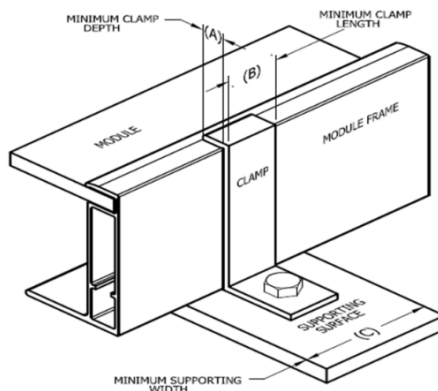

Dimension	mm	Inch
Module Clip Dimensions		
A	6.35	0.25
B	38	1.5

MISSION SOLAR ENERGY - MSE CONTROLLED- PROPRIETARY & CONFIDENTIAL - RELEASED

Reproduction, dissemination, copying, modification, distribution and/or publication of this material is **STRICTLY PROHIBITED**. Disclosure of this document, in any manner to a third party, requires prior written consent from **MISSION SOLAR ENERGY LLC**.

REVISION: R1

RELEASE DATE: 5/2/2017



MODULE INSTALLATION AND USER MANUAL – P MULTI

REVISION DATE: 6/14/2017

DOCUMENT # GE-SA1-0007

PAGE: 9 OF 12

10.0 GROUNDING INSTRUCTIONS

A module with exposed conductive parts is considered to be in compliance with UL 1703 and IEC 61730 only when it is electrically grounded in accordance with the instructions presented below and the requirements of the National Electric Code. To reduce the possibility of electrical shock, ground the frame of the module or array before wiring the circuit using a grounding method that meets NEC requirements for grounding solar electrical systems. In order to install, Mission Solar Energy modules shall be grounded using grounding hardware that has been certified to meet requirements for grounding systems in UL467, UL1703, or UL1741 on anodized aluminum frames. Mission Solar Energy recommends one of the following methods of grounding the module frame. Where common grounding hardware (nuts, bolts, star washers, split-ring lock washers, flat washers and the like) is used to attach a listed grounding/bonding device, the attachment must be made in conformance with the grounding device manufacturer's instructions.


Common hardware items such as nuts, bolts, star washers, lock washers and the like have not been evaluated for electrical conductivity or for use as grounding devices and should be used only for maintaining mechanical connections and holding electrical grounding devices in the proper position for electrical conductivity. Such devices, where supplied with the module and evaluated through the requirements in UL 1703, may be used for grounding connections in accordance with the instructions provided with the module.

In addition to the grounding and/or mounting methods included in these instructions, this module may be grounded and/or mounted using the instructions provided with a racking system in compliance with UL Outline (Standard) 2703 where this module has been evaluated with that racking system.

10.1. WEEB-UIR

The WEEB washer family of products can be used to bond anodized aluminum, galvanized steel, steel and other electrically conductive metal structures. All installations shall be in accordance with NEC requirements in the USA and with CSA C22.1 in Canada. The WEEB washers are for use with modules that have a maximum fuse rating of less than 25A. Use WEEB-UIR to bond solar modules to module mounting purlin and torque fasteners to 7ft-lb / 9.5N-m use Penetrox-A on threads. The following UL Recognized component, Bonding Washer, manufactured by BURNDY LLC (E351343) in combination with the following model number PV module(s), used with a flat washer, a 6-32 inch size nut and bolt (see Figure 6 for details).

FIGURE 6: GROUNDING USING WEEB-UIR

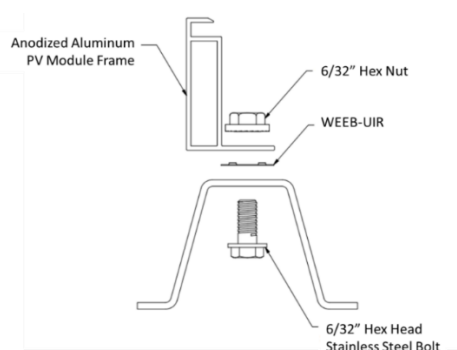

MISSION SOLAR ENERGY - MSE CONTROLLED- PROPRIETARY & CONFIDENTIAL - RELEASED

Reproduction, dissemination, copying, modification, distribution and/or publication of this material is **STRICTLY PROHIBITED**. Disclosure of this document, in any manner to a third party, requires prior written consent from **MISSION SOLAR ENERGY LLC**.

REVISION: R1

RELEASE DATE: 5/2/2017



MODULE INSTALLATION AND USER MANUAL – P MULTI

REVISION DATE: 6/14/2017

DOCUMENT # GE-SA1-0007

PAGE: 10 OF 12

11.0 ELECTRICAL INSTALLATION

11.1. LOCAL/NATIONAL CODE AND LOCAL REGULATIONS

To carry out installation, local regulations that may apply should be taken into account such as NEC (USA) or Canadian Electrical Code (Canada). Wiring should be performed by a qualified and licensed professional. Wiring should be protected to help ensure personal safety and to prevent its damage. All modules connected in series should be of same model number and/or same type. Do not connect modules in parallel without using a combiner box or equivalent.

Under normal conditions, a photovoltaic module is likely to experience conditions that produce current and/or voltage than reported at standard test conditions. The requirements of the National Electric Code (NEC) in Article 690 shall be followed to address these increased outputs. In installations not under the requirements of the NEC, the values of I_{SC} and V_{OC} marked on this module should be multiplied by a factor of 1.25 when determining component voltage ratings, conductor capacities, over current device ratings and the size of controls connected to the PV output.

11.2. WIRING

Mission Solar PV modules come with factory assembled J-Box. Do not open junction box in any case. Wiring must be done in accordance with local/national code and regulations; wear protective gloves and shoes to avoid electric shock. Address the following recommendations.

- The modules combined in parallel will produce a specific current output. Each series string or module will be required to be fused. Table 1 describes the maximum fuse size allowed.
- Do not connect the modules if the connectors are wet.
- Be sure to put the cables away from sharp edges
- If you need additional cables you must use exclusively solar cable of 12AWG/4mm² minimum cross-sections, with ability to work in a temperature range of at least -40°C and 90°C.
- Install the modules so that water from rain or condensation cannot penetrate inside the cable conduits.
- Fix cables to the structure so that the connectors are protected from water ingress. Cables should be held by UV resistant clamps or ties.
- To minimize possible effects of lightning induced voltages, the surface of all conductive loops must be as small as possible.
- Check that the wiring is correct before starting operating the installation by verifying that the open voltage is within expected values.
- Unprotected cables that could suffer mechanical damage must be protected.
- Avoid direct sunlight on cables.
- Maximum series fuse rating is 15A.
- Details for wiring in accordance with the NEC, and that the grounding method of the frame of arrays shall comply with the NEC, article 250.
- Installation shall be in accordance with CSA C22.1, Safety Standard for Electrical Installations, Canadian Electrical Code, and Part 1.

MISSION SOLAR ENERGY - MSE CONTROLLED- PROPRIETARY & CONFIDENTIAL - RELEASED

Reproduction, dissemination, copying, modification, distribution and/or publication of this material is **STRICTLY PROHIBITED**. Disclosure of this document, in any manner to a third party, requires prior written consent from **MISSION SOLAR ENERGY LLC**.

REVISION: R1

RELEASE DATE: 5/2/2017



MODULE INSTALLATION AND USER MANUAL – P MULTI

REVISION DATE: 6/14/2017

DOCUMENT # GE-SA1-0007

PAGE: 11 OF 12

- Modules may be connected in series (voltage additive) and/or in parallel (current additive) to produce the appropriate electrical output. When connecting modules in parallel, each module (or series string of modules so connected) shall be connected according to the maximum series fuse as specified. So recommended series connection of module open voltage should not exceed 80% limits range of the system voltage and the fuse should be connected at end of each array.
- The installation instructions specify that Grounding is achieved through securement to the array frame. The array frame shall be grounded in accordance with NEC Article 250.

11.3. CONNECTORS

- Keep connectors dry and clean, and ensure that connector caps are hand tight before connecting the modules.
- Do not attempt to make an electrical connection with wet, soiled, or otherwise faulty connectors.
- Avoid sunlight exposure and water immersion of the connectors. Avoid allowing connectors to rest on the ground.
- Check for same kind of cable connectors that are UL and Canadian code complaint.
- Faulty connections can result in arcs and electrical shock.
- Check that all electrical connections are securely fastened.
- Make sure that all locking connectors are fully engaged and locked.

11.4. DIODES

- The junction boxes used with Mission Solar Energy Modules contain bypass diodes wired in parallel with the PV cell strings.
- In the case of partial shading, the diodes bypass the current generated by the non-shaded cells, thereby limiting modules heating and performance losses. Bypass diodes are not over-current protection devices.
- Bypass diodes divert current from the cell strings in the event of partial shading. In the event of a known or suspected diode failure, installers or maintenance providers should contact Mission Solar Energy.
- Never attempt to open the junction box by yourself.

12.0 MAINTENANCE

12.1. VISUAL INSPECTION:

Mission Solar Energy recommends that PV systems be periodically inspected by the installer, or other qualified person. The purpose of the PV system inspection is to ensure that all system components are functioning properly. At a minimum, this inspection should confirm the following:

- All cables and connector attachments are undamaged and properly secured.
- No sharp objects are in contact with the PV module surfaces.
- PV modules are not shaded by unwanted obstacles and/or foreign material.
- Mounting and grounding components are tightly secured with no corrosion.
- Defects should be addressed immediately.

MISSION SOLAR ENERGY - MSE CONTROLLED- PROPRIETARY & CONFIDENTIAL - RELEASED

Reproduction, dissemination, copying, modification, distribution and/or publication of this material is **STRICTLY PROHIBITED**. Disclosure of this document, in any manner to a third party, requires prior written consent from **MISSION SOLAR ENERGY LLC**.

REVISION: R1

RELEASE DATE: 5/2/2017



MODULE INSTALLATION AND USER MANUAL – P MULTI

REVISION DATE: 6/14/2017

DOCUMENT # GE-SA1-0007

PAGE: 12 OF 12

12.2. CLEANING:

- The dust accumulated on the front transparent substrate may reduce the power output, and may even cause regional hot-spot effect.
- It's usually not dangerous for the accumulated dust to reduce the sunshine, because the light intensity is still homogeneous and the power reduction is not usually obvious.
- When Modules are working, there should not be environmental influence factors to cast shadows and cover part or even all of the Modules, such as other Modules, system support, bird drops and a lot of dust, clay or plant and so on, these may distinctly reduce the power output.
- The cleaning frequency depends on the accumulated frequency.
- It is recommended to wipe the glass surface with a wet sponge or soft cloth. Please do not clean the glass with a cleaning agent containing acid or alkali.

12.3. ADDITIONAL DOCUMENTS

- For more information on WEEB–UIR, please visit <http://www.we-llc.com/home>

12.4. DISPOSAL

For disposal, refer to the local rules and regulations.

R. REVISION HISTORY

REV	ORIGINATOR/DC INITIALS	DESCRIPTION OF & REASON FOR CHANGE(S)	RELEASE DATE
0	SJ TARK / JW	Initial release of document control procedure	05/02/2017
R1	SJ TARK / JW	Added paragraph three to 10.0 Grounding Instructions	6/14/2017

MISSION SOLAR ENERGY - MSE CONTROLLED- PROPRIETARY & CONFIDENTIAL - RELEASED

Reproduction, dissemination, copying, modification, distribution and/or publication of this material is **STRICTLY PROHIBITED**. Disclosure of this document, in any manner to a third party, requires prior written consent from **MISSION SOLAR ENERGY LLC**.

REVISION: R1

RELEASE DATE: 5/2/2017